


New Drawing Settings Procedure


New drawing settings are the values SmartDraft uses when a new drawing (a drawing never “touched” by SmartDraft) is created.

From the **SmartDraft** tab, select the down arrow on the **Setup** panel and select the **Customization Template Manager** command.

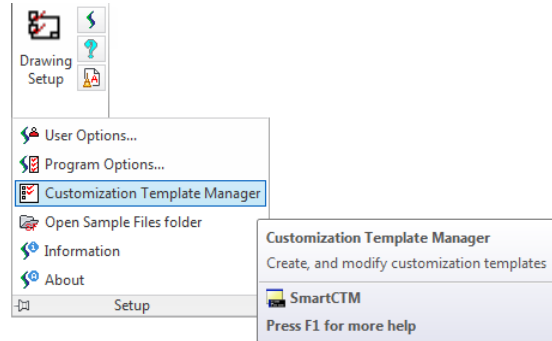

From the **Customization Template Manager** dialog.

Change to the Customization Template **Name:** to the template created for your company <Company Name>.

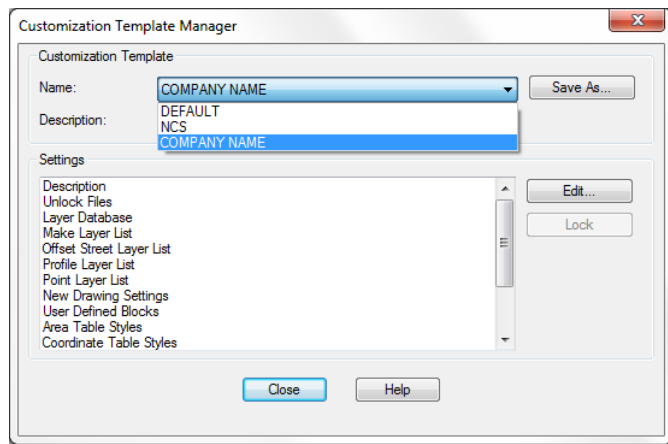


Highlight **New Drawing Settings** and select the **Edit...** button.


From the **New Drawing Settings** dialog.

Set the values as desired by your company.

Note: In Civil 3D the Horizontal Scale is read from the drawing and this value is ignored, for AutoCAD and AutoCAD Map, this value is used.

To set the text style values used by SmartDraft Select the **Text Styles...** button.

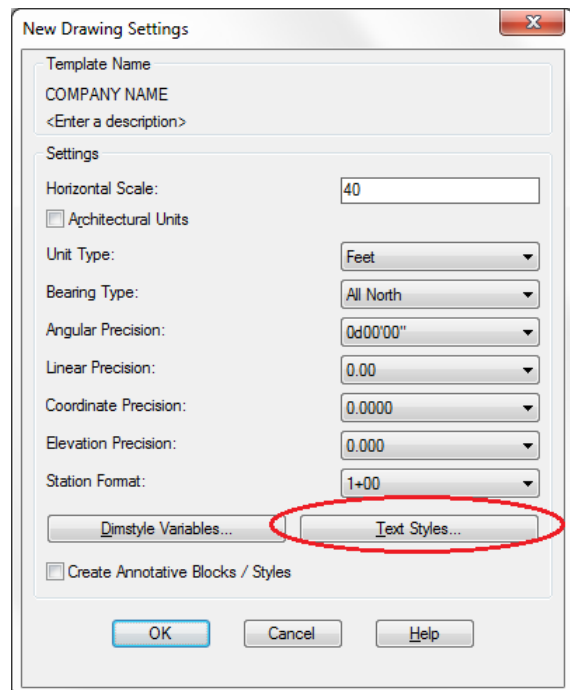

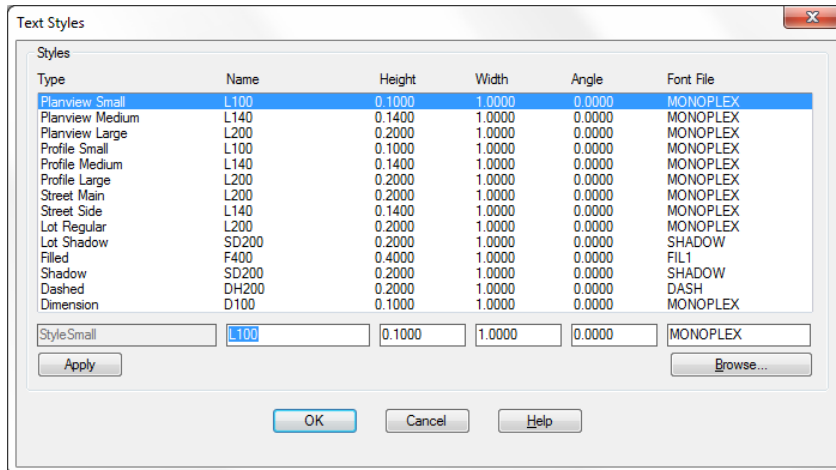

In the **Text Styles** dialog, select the style type and make the changes as needed. Remember to select the Apply button to make the changes appear next to the type list.

Select **OK** to save the changes.

Once the New Drawing Settings have been saved with your company’s SmartDraft Customization Template, they will be used for NEW drawing only. Drawings already “touched” by SmartDraft, will have the drawing setting associated with them from values present when the drawing was created.

To update the settings of an existing drawing (one already “touched” by SmartDraft).

In an existing drawing, start the SmartDraft Drawing Setup command, alias **DDS**.

Drop-down and reselect the customization template create for your company “<Company Name>”. This process re-reads the **New Drawing Settings** file and updates the drawing’s SmartDraft settings.

